
Columns Supplied in Halves Installation

16" Diameter or Larger Fiberglass Columns

1. For each complete column, the following parts are supplied and marked as sets:
 - 2 Column shaft halves
 - 2 Column base halves
 - 2 Column capital halves
2. The column shaft extends from the top of the capital down to the floor. The base fits around the shaft. The shaft does not sit on top of the base. The capital fits over the top of the column shaft.
3. Measure the height from the floor to the ceiling. Cut both column shaft halves to 3/4" less than this height. Use a hacksaw or a sabersaw.
4. Install the first capital half by attaching through the top of the capital to the ceiling.
5. Install the first half shaft at the cap and floor with metal clip angles (not included).
6. Install the second capital half by placing it in position next to the first half. Then attach through the top of the capital to the ceiling.
7. Install the second shaft by placing it in position next to the first half. Then screw through one column half into the flange on the other column half. Use countersunk screws, 12" apart.
8. Install the base around the column in a similar way.
9. Fill the joint seam and screw head holes with the Fiberglass Filler provided. Sand smooth.
10. Paint.