




rown's Classic wood column is an upgraded selection to the Colonial and Authentic styles.

Available with a plain or fluted shaft, the Classic column is manufactured with a one-third straight, two-third radius taper (correct entasis). The bead detail is more sophisticated and has an architectural attractiveness.

Every column shaft is made with finger-jointed staves for added strength and stability. The staves are joined using tongue and groove joints with Type I exterior glues and each shaft is treated with a wood preservative. All sizes for wood columns include the standard Tuscan capital, column shaft and Tuscan base and plinth.

## Classic Wood

	PINE					1 1			ALL ALL ROOMS AND ADDRESS.
CLASSIC DIMENSIONS									
	Bottom	Neck	Above		Flute	Above	Below	No.	
Size	Dia.	Dia.	Bead	Bead	Width	Flute	Flute	Flutes	Lengths
	A	В	M	I	L	K	J		
6"	5 1/2"	4 3/4"	3 1/8"	1 ³/s"	3/4"	3 1/2"	10 <sup>3</sup> / <sub>4</sub> "	12	8′9′10′
8"	7 1/4"	6 1/4"	3 1/8"	1 <sup>3</sup> /s"	15/ <sub>16</sub> "	3 1/2"	10 <sup>3</sup> / <sub>4</sub> "	16	8'9'10'12'
10"	9 1/4"	8"	3 1/8"	1 3/s"	15/16"	3 1/2"	10 3/4"	20	8'9'10'12'14'16'
12"	11 1/4"	9 1/4"	3 1/8"	1 <sup>3</sup> /8"	15/16"	3 1/2"	10 3/4"	24	8'9'10'12'14'16'18'
14"	13 <sup>5</sup> /s''	12"	*	1 <sup>3</sup> /8"	1 1/s"	2 3/4"	5"	24	8'9'10'12'14'16'18'20'
16"	15 <sup>5</sup> /s"	13 1/2"	*	1 ³/s"	1 1/4"	2 3/4"	5"	24	8'9'10'12'14'16'18'20'
18"	17 <sup>5</sup> /s''	15"	*	1 3/s"	1 1/2"	2 3/4"	5"	24	8'9'10'12'14'16'18'20'22'
20"	19 <sup>5</sup> /s''	17"	*	1 <sup>3</sup> /s''	1 5/s"	2 3/4"	5"	24	12'14'16'18'20'22'24'
22"	21 <sup>5</sup> /s"	18 1/2"	*	1 <sup>3</sup> /s"	1 3/4"	2 3/4"	5"	24	12'14'16'18'20'22'24'
24"	23 <sup>5</sup> / <sub>8</sub> "	20"	*	1 ³/s"	$1^{7}/s''$	2 3/4"	5"	24	12'14'16'18'20'22'24'
22"	21 <sup>5</sup> /s"	18 1/2"	*	1 ³/s"	1 3/4"	2 3/4"	5"	24	12'14'16'18'20'22'24'

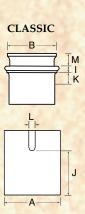

Classic Column with Tuscan Capital & Attic Base Molding

COLUMNS TO SURROUND STRUCTURAL SUPPORTS					
Size	Maximum Round Support	Maximum Square Support			
6"	2 1/4"	*			
8"	3 1/2"	*			
10"	5"	3 1/2"			
12"	6 1/2"	4 1/2"			
14"	8 1/2"	6"			
16"	10 1/4"	7 1/2"			
18"	11 1/2"	8 1/2"			
20"	13 3/4"	9 1/2"			
22"	15 1/4"	10 1/2"			
24"	16"	11 1/4"			
Split Columns are non load bearing.					

LOAD BEARING			
Size	Load Bearing Capacity		
6"	7,000		
8"	10,000		
10"	10,000		
12"	10,000		
14"	10,000		
16"	18,000		
18"	18,000		
20"	18,000		
22"	18,000		
24"	18,000		
1. All lo	ad bearing capacities		

All load bearing capacities are based on axial loads with no moments.

200	100	1,177			
CUT AT BEAD LOSS					
When using a Decorative Capital					
		Tuscan			
Size	Loss	Cap. Height			
	M				

Size	Loss	Cap. Height
	M	
6"	5 1/4"	2 <sup>3</sup> /s"
8"	5 1/4"	2 <sup>3</sup> /s"
10"	5 1/4"	2 <sup>3</sup> /s"
12"	5 1/4"	2 ³/s"
		"

1. All larger size columns (14"+) are made to overall length.



A Split Column Kit should be used to reassemble the split fiberglass or wood column shaft halves.

