

**EMPIRE**



To be Used With	Capital Diameter	Height	Abacus
6"	5"	3 1/8"	9"
8"	6 1/2"	7 3/4"	10"
10"	8 1/2"	5 1/4"	13 1/2"
12"	10 1/4"	6 1/4"	18"
14"	12 1/2"	7 1/4"	20 1/2"
16"	14"	8 3/4"	23"
18"	14"	8 3/4"	23"
20"	16 1/2"	10"	32"
22"	18"	11 1/4"	34"
24"	20 1/2"	12 3/4"	35 1/2"

**WITH NECKING**

To be Used With	Capital Diameter	Height	Abacus
6"	5"	6 7/8"	9"
8"	6 1/2"	7 3/4"	10"
10"	8 1/2"	10 1/4"	13 1/2"
12"	10 1/4"	11"	18"
14"	12 1/2"	14 1/2"	20 1/2"
16"	14"	17"	23"
18"	14"	17"	23"
20"	16 1/2"	18 1/4"	32"
22"	18"	17 1/4"	34"
24"	20 1/2"	19"	35 1/2"



**MODERN COMPOSITE**

To be Used With	Capital Diameter	Height	Abacus
6"	4 3/4"	7"	7 1/2"
8"	6"	8 1/4"	10 5/8"
10"	8"	10 1/2"	16"
12"	9"	12"	18"
14"	12"	17"	19 3/4"
16"	13"	17 5/8"	26"
18"	15 1/2"	20"	29"

**GREEK ERECTHEUM**



To be Used With	Capital Diameter	Height	Abacus
6"	5"	3 1/8"	6 7/8"
8"	7"	4 1/2"	9 3/8"
10"	9 1/8"	5 5/8"	13 1/8"
12"	11"	6 1/2"	14 1/4"
14"	12 3/4"	7"	16 1/4"
16"	15 1/4"	10 1/4"	22"
18"	16 1/2"	10"	21 1/4"
20"	18"	11 1/8"	26 1/4"
22"	20"	11 1/2"	27"
24"	22"	13 1/8"	31"
26"	24"	14"	31 1/2"
28"	25"	15"	32 1/2"

**WITH NECKING**

To be Used With	Capital Diameter	Height	Abacus
6"	4 7/8"	4 1/2"	6 1/2"
8"	6 1/2"	5 3/4"	7 1/2"
10"	8 3/8"	7 3/4"	10 1/2"
12"	10"	9 1/2"	14 1/4"
14"	12 3/4"	11 3/8"	16 1/4"
16"	14 1/2"	13 1/4"	18"
18"	15 1/2"	14 7/8"	21 1/2"
20"	16 1/2"	15 1/8"	21 1/4"
22"	18"	17"	26 1/4"
24"	20"	17 1/2"	27"
26"	24"	22"	31 1/2"
28"	25"	24"	32 1/2"



**TEMPLE OF WINDS**

To be Used With	Capital Diameter	Height	Abacus
6"	5"	6 7/8"	7 3/4"
8"	6 1/2"	7 1/4"	10 1/4"
10"	8"	10"	13 5/8"
12"	9 1/2"	11 1/4"	16 1/4"
14"	12 "	14"	21 1/4"
16"	13 1/4"	15 1/8"	22 1/2"
18"	15 1/2"	18 1/4"	26"
20"	17 1/2"	21 1/2"	28"
22"	18"	21 1/2"	27 3/4"
24"	19 1/2"	23"	35 3/4"
26"	22"	24"	37 1/4"
28"	24"	26 1/8"	37 1/4"
30"	26"	30"	39"

**GREEK ANGULAR IONIC**



To be Used With	Capital Diameter	Height	Abacus
6"	4 1/2"	2 3/4"	7 1/2"
8"	6 5/8"	4"	9 1/4"
10"	8 1/2"	5 1/2"	14 1/2"
12"	10 1/2"	6 1/8"	17 1/4"
14"	12 1/2"	7 1/4"	20 1/2"
16"	14 3/4"	8 3/8"	22 1/2"
18"	16"	9 3/4"	24 1/4"
20"	18"	11"	29 3/4"
22"	20 5/8"	12 3/4"	35"
24"	N/A	N/A	N/A
26"	24"	14 3/4"	39 1/2"

**WITH NECKING**

To be Used With	Capital Diameter	Height	Abacus
6"	4 1/2"	5 1/2"	7 1/2"
8"	6 5/8"	8"	9 1/4"
10"	8 1/2"	10 1/8"	14 1/2"
12"	10 1/2"	11"	17 1/4"
14"	12 1/2"	14 3/8"	20 1/2"
18"	14 3/4"	17"	22 1/2"
20"	18"	19"	30"



**ROMAN CORINTHIAN**

To be Used With	Capital Diameter	Height	Abacus
6"	4 3/4"	7"	9 3/8"
8"	6"	8"	11 1/2"
10"	8 3/8"	11"	14"
12"	9 1/2"	13 3/4"	19"
14"	12 1/2"	17 1/4"	22 3/4"
16"	13"	17 3/8"	27"
18"	15"	17 3/4"	25 1/4"
20"	17 1/4"	25 1/4"	39"
22"	18"	25 1/2"	39"
24"	20"	28 1/2"	42"
26"	22 1/2"	32"	42"
28"	23 3/4"	32"	44"
30"	25"	34 1/2"	46"
32"	26"	36"	48"
36"	32"	42"	55"



**ROMAN IONIC**



To be Used With	Capital Diameter	Height	Abacus
6"	5 1/8"	2 3/8"	6 1/8"
8"	6 5/8"	3 3/8"	8 1/4"
10"	9"	4 1/2"	11 1/2"
12"	11 1/4"	4 3/4"	13"
14"	13 1/4"	5 3/4"	17"
16"	15"	6 3/8"	18"
18"	16"	6 1/2"	21 1/4"
20"	18 1/2"	9"	25"
22"	20 1/2"	9 1/2"	25 1/8"
24"	22 3/4"	9 1/2"	26 1/2"

**SCAMOZZI**



To be Used With	Capital Diameter	Height	Abacus
6"	5 1/4"	2 1/2"	7 7/8"
8"	7"	3 3/8"	11"
10"	9"	4"	14"
12"	11"	5"	16 3/4"
14"	11"	5 1/8"	16 1/2"
16"	14 1/4"	5 7/8"	21 3/4"
18"	16"	7 1/2"	24 3/4"
20"	18"	8 1/2"	28 1/2"
22"	20"	9 1/4"	30 1/2"
24"	22"	10 5/8"	32 1/4"

**SPECIALTY ITEMS**



Crown Column & Millwork offers an infinite selection of specialty items, including these hand carved capitals. We specialize in historical replications, custom specifications and unique designs. For more information regarding a custom item please contact our sales department at 888-862-0880.

**CARE & HANDLING**

To ensure a maximum product life and successful installation, follow these tips for care, handling and installation:

1. Always keep wood products in a dry, well-ventilated area until you are ready to begin painting.
2. Exterior applications require only the best exterior grade oil-based paint. Apply at least one coat prior to installation to seal the wood against moisture. Then, apply your finish coats once your columns have been erected.
3. Always provide for sufficient ventilation. Proper airflow is one of the keys to a successful installation. Moisture-related problems may be avoided by using a recessed soffit (see drawing) and providing equal amounts of air flow at both the top and bottom of the shaft.
4. Maintain your columns regularly. Check for ventilation, bird's nests, insects, etc., and touch up the oil-based paint on all exposed surfaces. Repaint as necessary.

When properly installed and maintained, architectural wooden columns will make a significant and long-lasting addition to your project.

